



**SKU # 1001 358 790**

**YOW SKU # 693 318**

**Model # TY499+449-1511**

## USE AND CARE GUIDE

### 91in 400L Thin Gold PVC Deer



*THANK YOU*

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 91in 400L Thin Gold PVC Deer. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

### Guarantee

#### What is Covered

The product is intended for residential seasonal use for approximately 90 days per year. This product is covered by a 90 day limited guarantee due to defects in material and workmanship. Return the product with purchase receipt to the location of purchase for refund within 90 days of purchase.

#### What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

**1-877-527-0313**

 
**HOMEACCENTSHOLIDAY.COM**

## Pre-Assembly

### PLANNING ASSEMBLY

Carefully remove all the parts from the box and place them on a flat surface. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center or return to store. Assembly of this product may require more than one person.


### PACKAGE CONTENTS

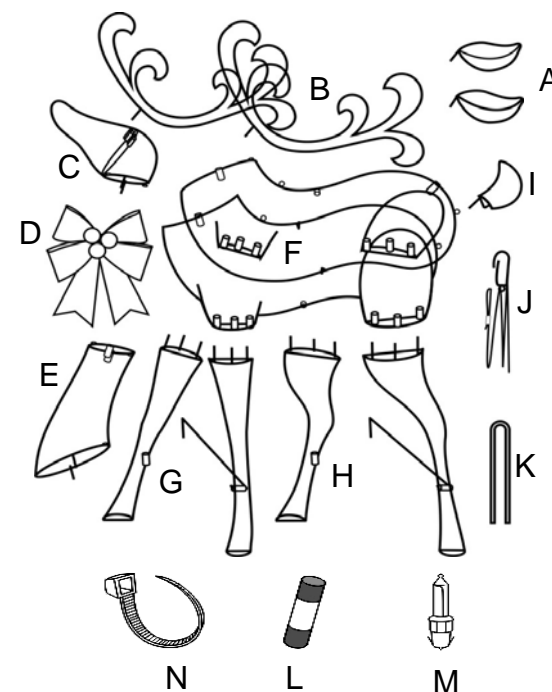

Package Contents/Parts List			Package Contents/Parts List		
Part	Description	Quantity	Part	Description	Quantity
A	Ear	2	H	Hind Legs	2
B	Antlers	2	I	Tail	1
C	Head	1	J	String	4
D	Accessory Bow	1	K	" U " shape stake	8
E	Neck	1	L	Spare Fuse	2
F	halves of Body	2	M	Spare Bulb	16
G	Front Legs	2	N	Plastic Ties	10

## Assembly
 
### Assembling the Deer

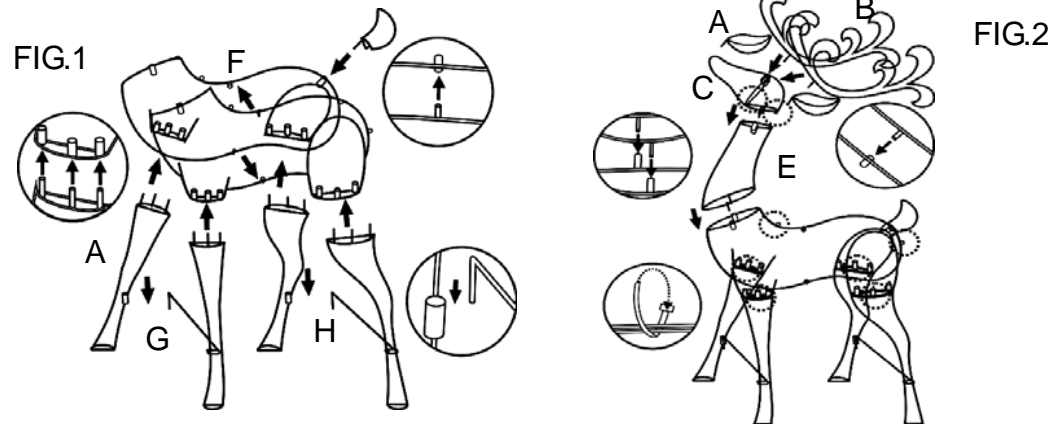


Step 1. Align the two halves of the Body(F) with each other and fasten with Plastic Ties (N). Insert the metal rods attached to the each Leg (G&H) into the matching holes on the underside of the Body (F) and fasten with the Plastic Ties (N).(FIG.1)

Step 2. The Legs come with metal bars attached to stabilize the Deer. Insert the hooked end of the metal bars into the metal hole on the opposite Leg.( FIG.1)

Step 3.Insert the rod of Tail (I) into the rear of the Body. (FIG.1)

Step 4.Insert the Neck (E) into the matching holes in the front edge of Body and fasten together with Plastic Ties (N).Insert the Head (C) into the matching holes in the front edge of Neck (E) and fasten together with Plastic Ties.(FIG.2)

 Step 5.Insert both Antlers and Ears (A&B) into the matching holes at the top of Head (C).(FIG.2)

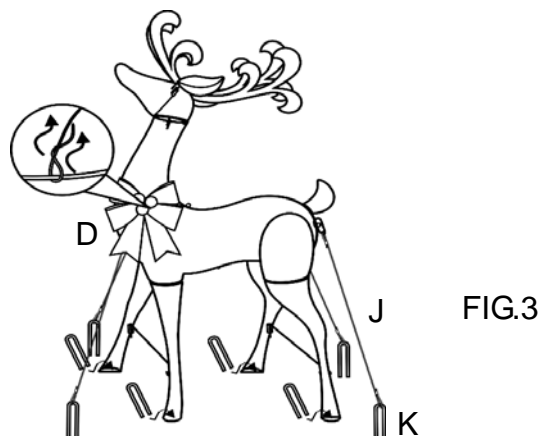

Step 6.Insert the wires of the Accessory (D) through the holes of the body then twist the wires together to secure.(FIG.3)

Step 7.Hook the plastic end of each of four anchoring strings(J) onto the matching loop in the neck and hips of body; put the " U " shape stake(K) thru the free end of each string(J) then tightly secure to the ground evenly;(Fig3).

## Pre-Operation

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 163.2Watts (1.36Amps). Do not overload. Do not connect to other lighting strings, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Return to Store or discard if the product has cuts, damage or frayed wire insulation on cords, cracks in the socket enclosures, loose connections or exposed copper wire.

## Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product, wire and lighting connections. If the product is placed somewhere other than the ground it should be well secured and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.
- Store the product neatly in a cool, dry location protected from sunlight.

## FOR INDOOR AND OUTDOOR USE